

000000-000000

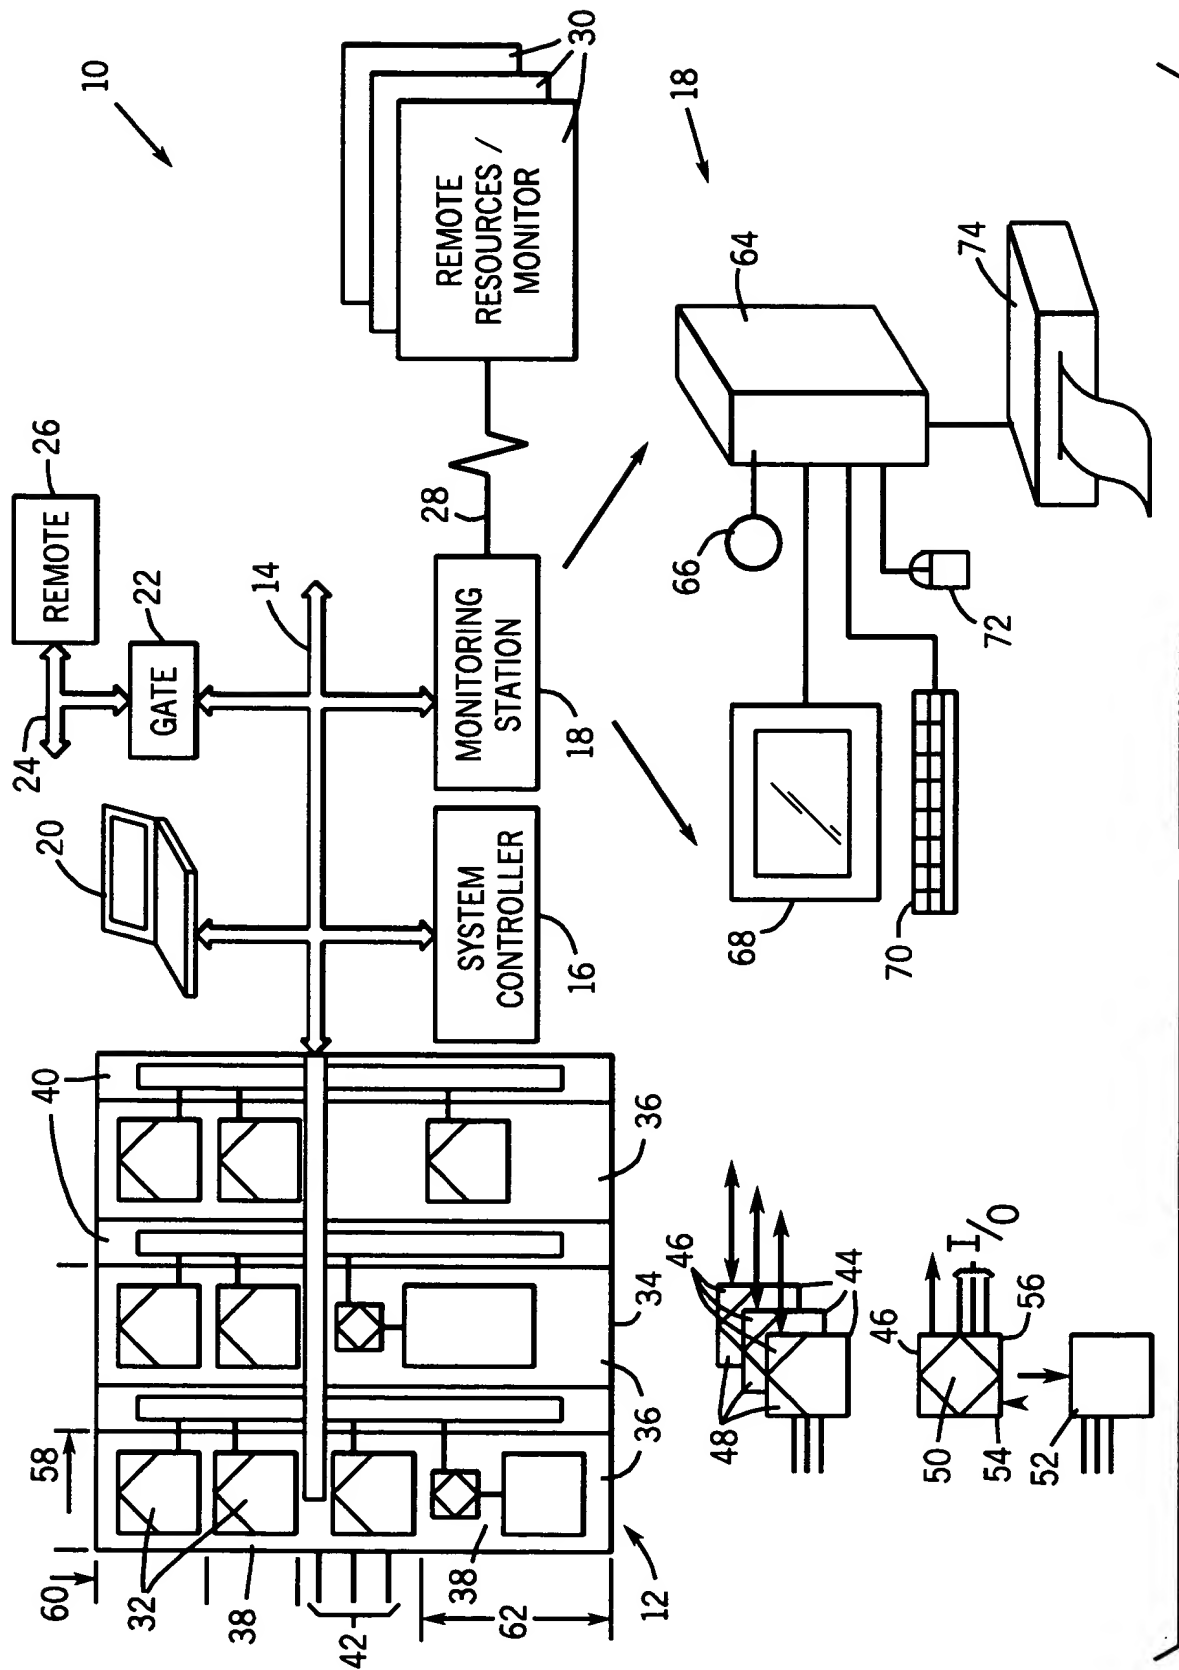


FIG. 1

FIG. 2

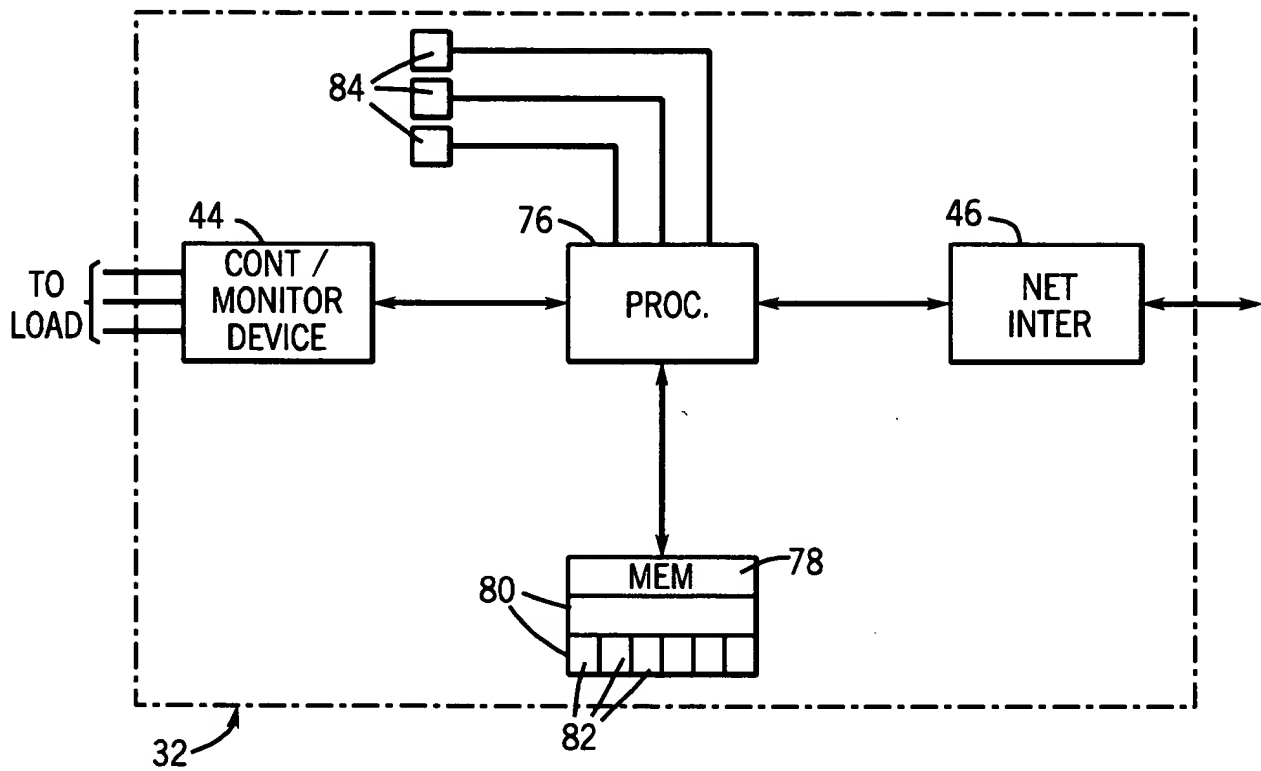
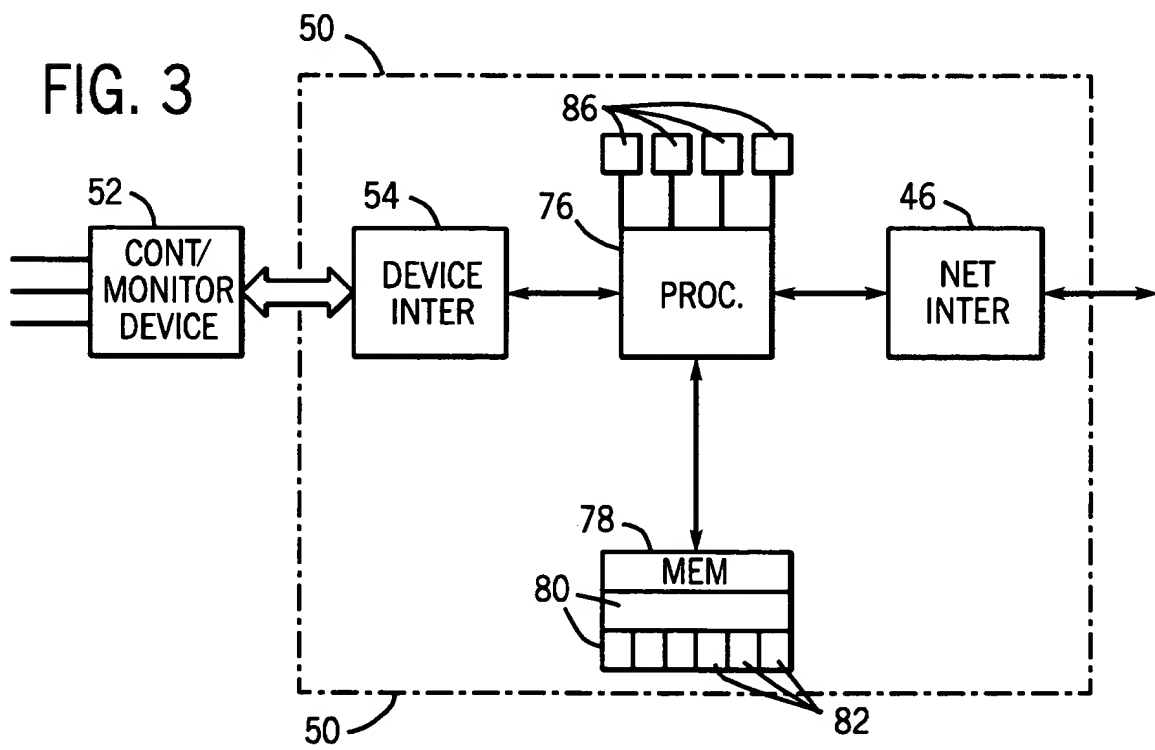


FIG. 3



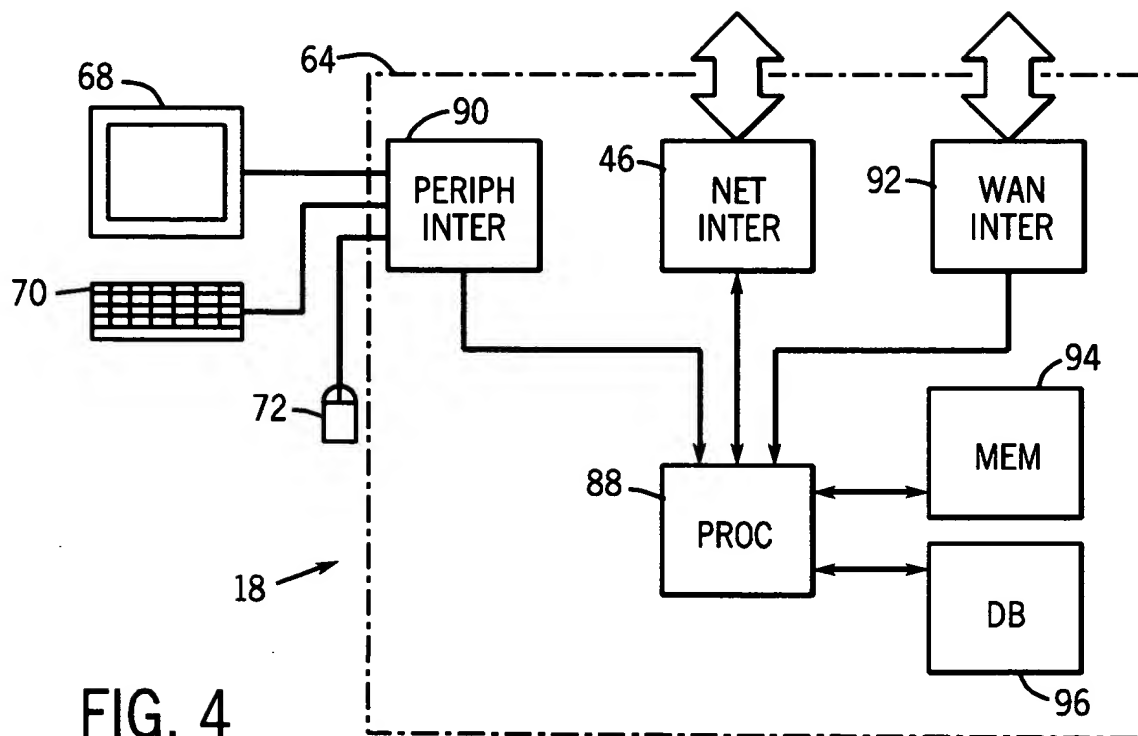


FIG. 4


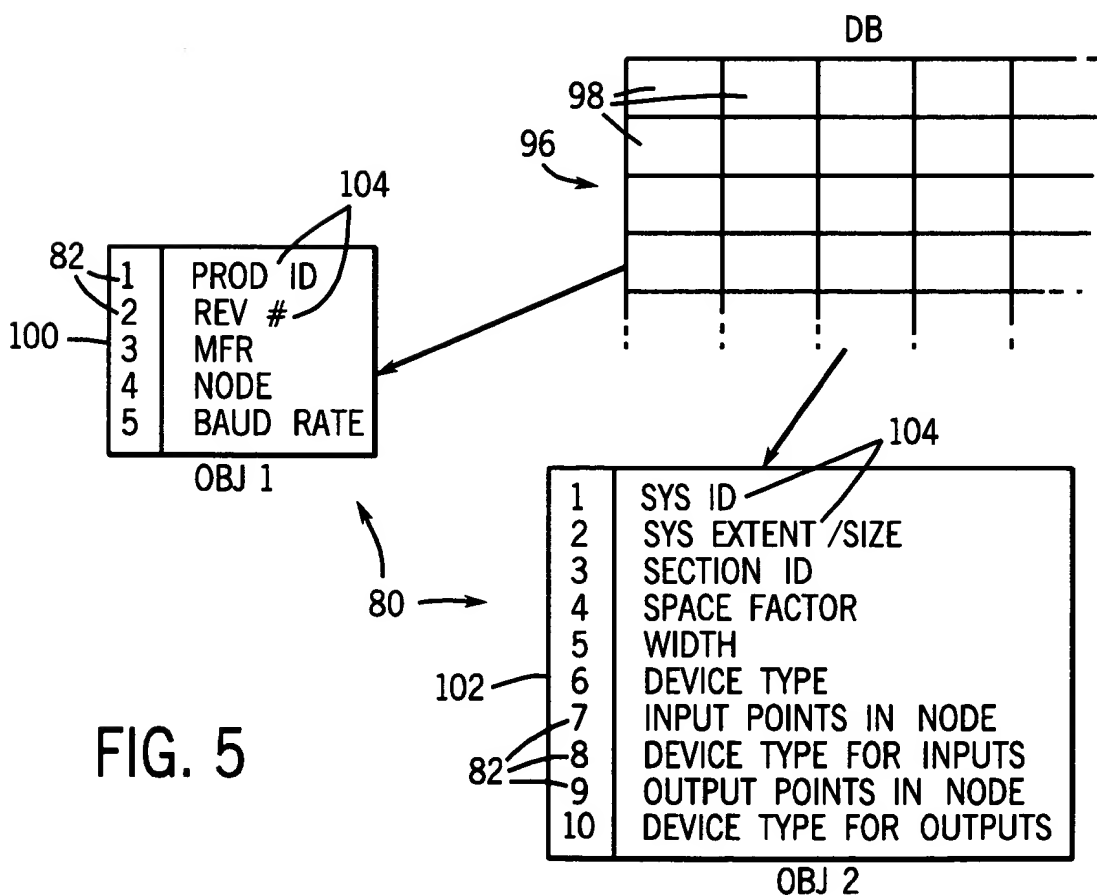


FIG. 5

FIG. 7

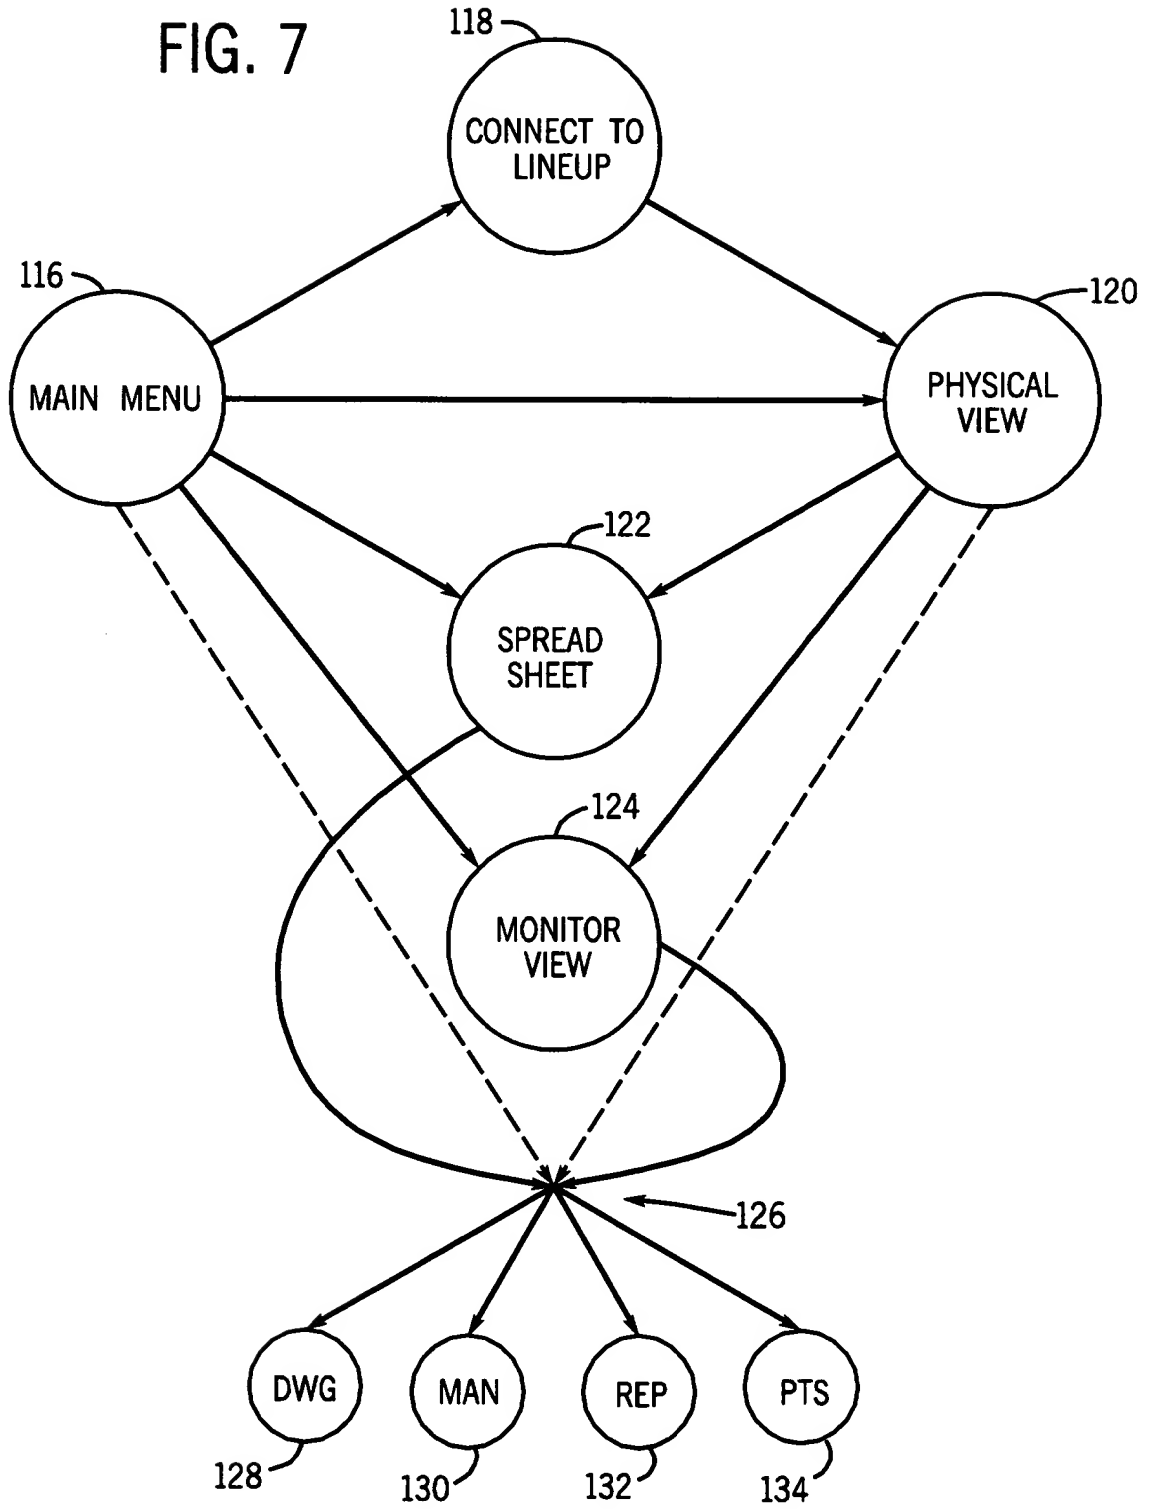

000000-16024960

000000-11000000

FIG. 8


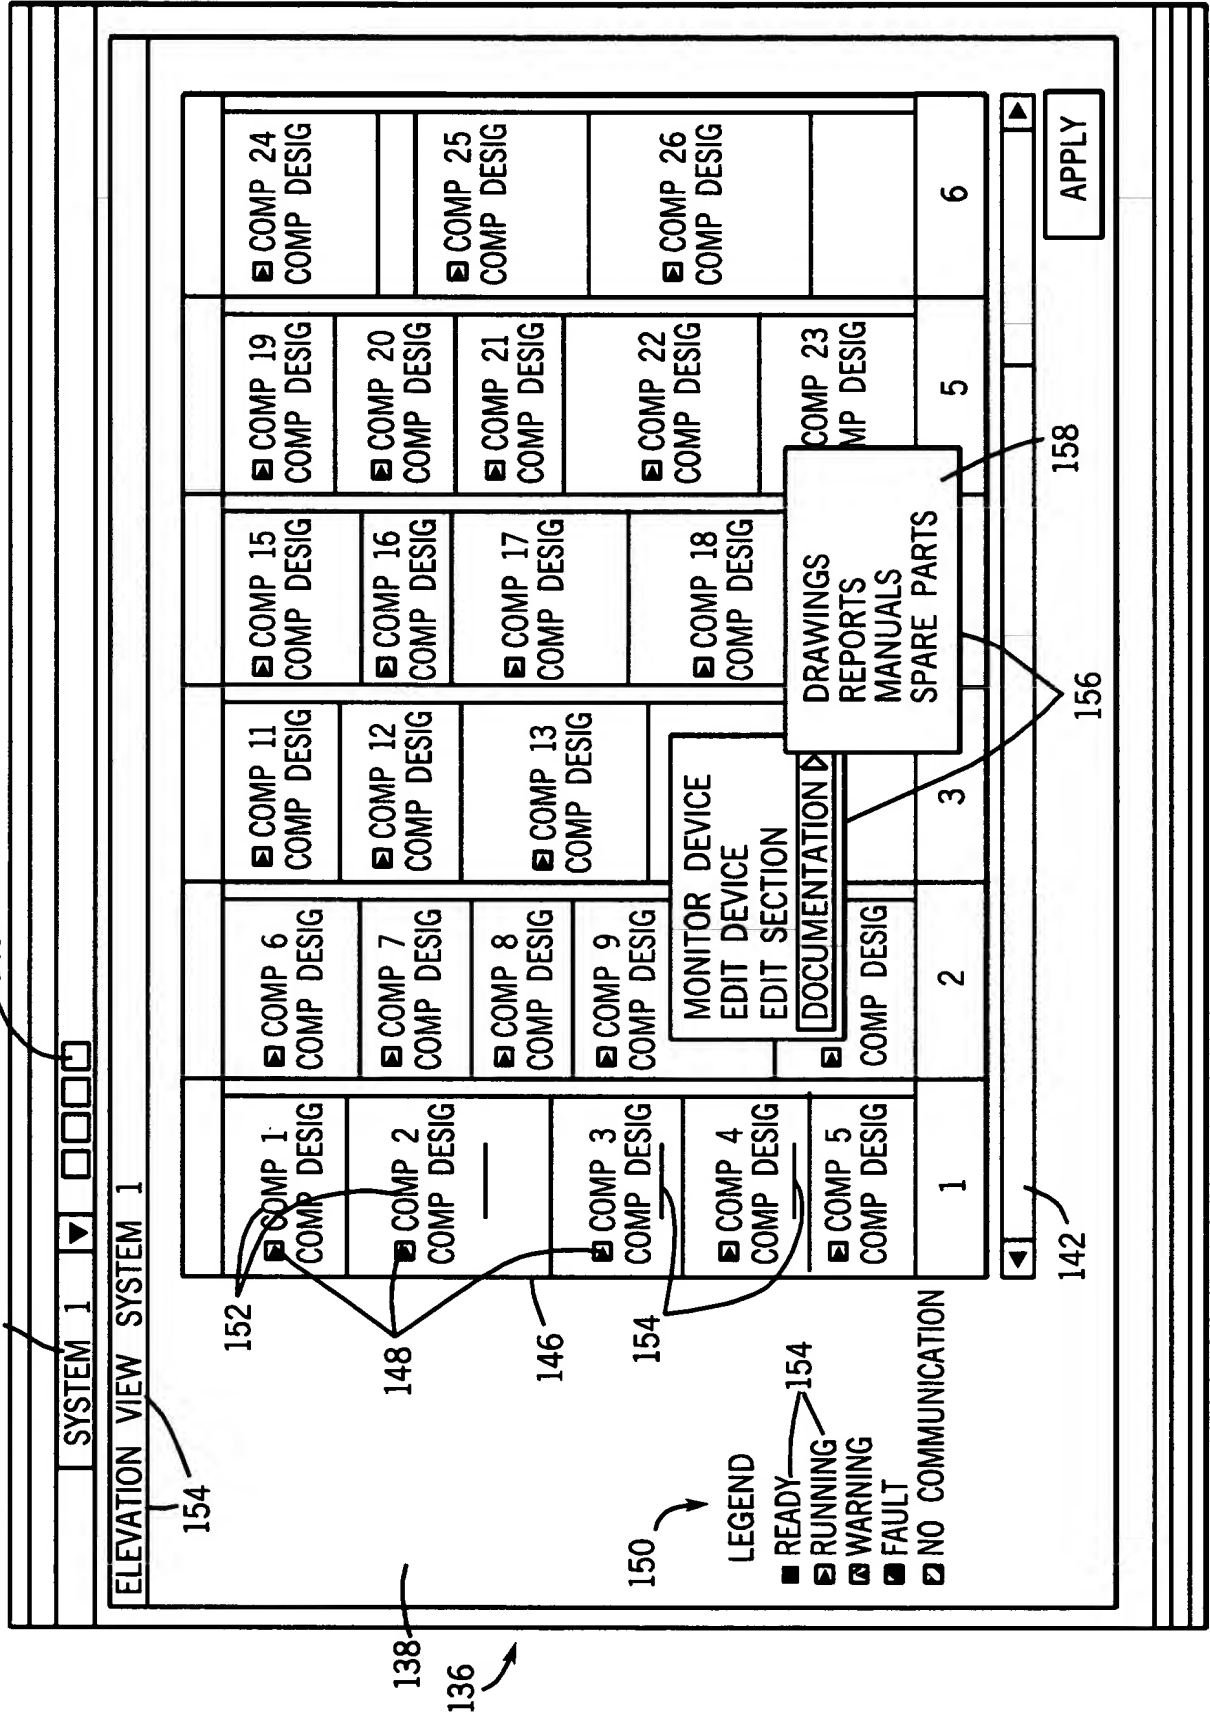


FIG. 9

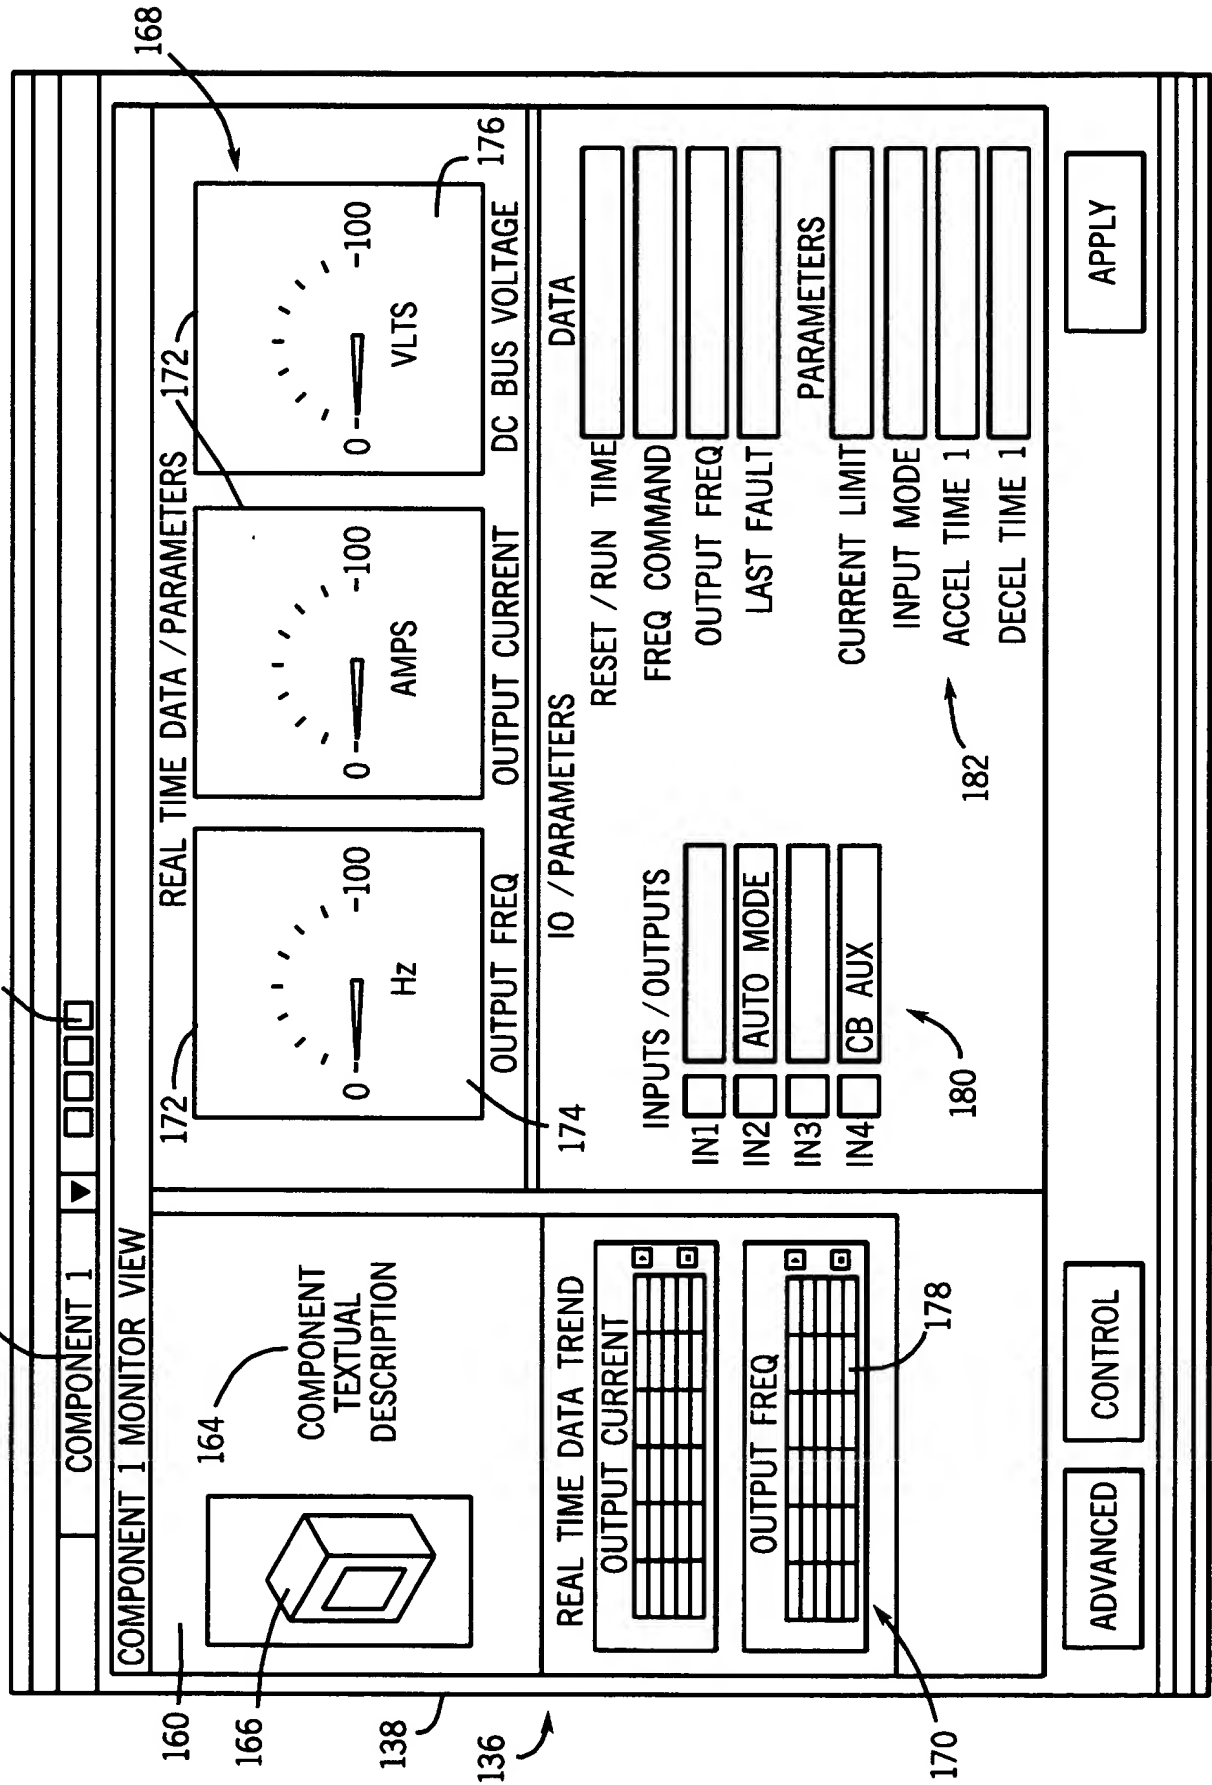

140

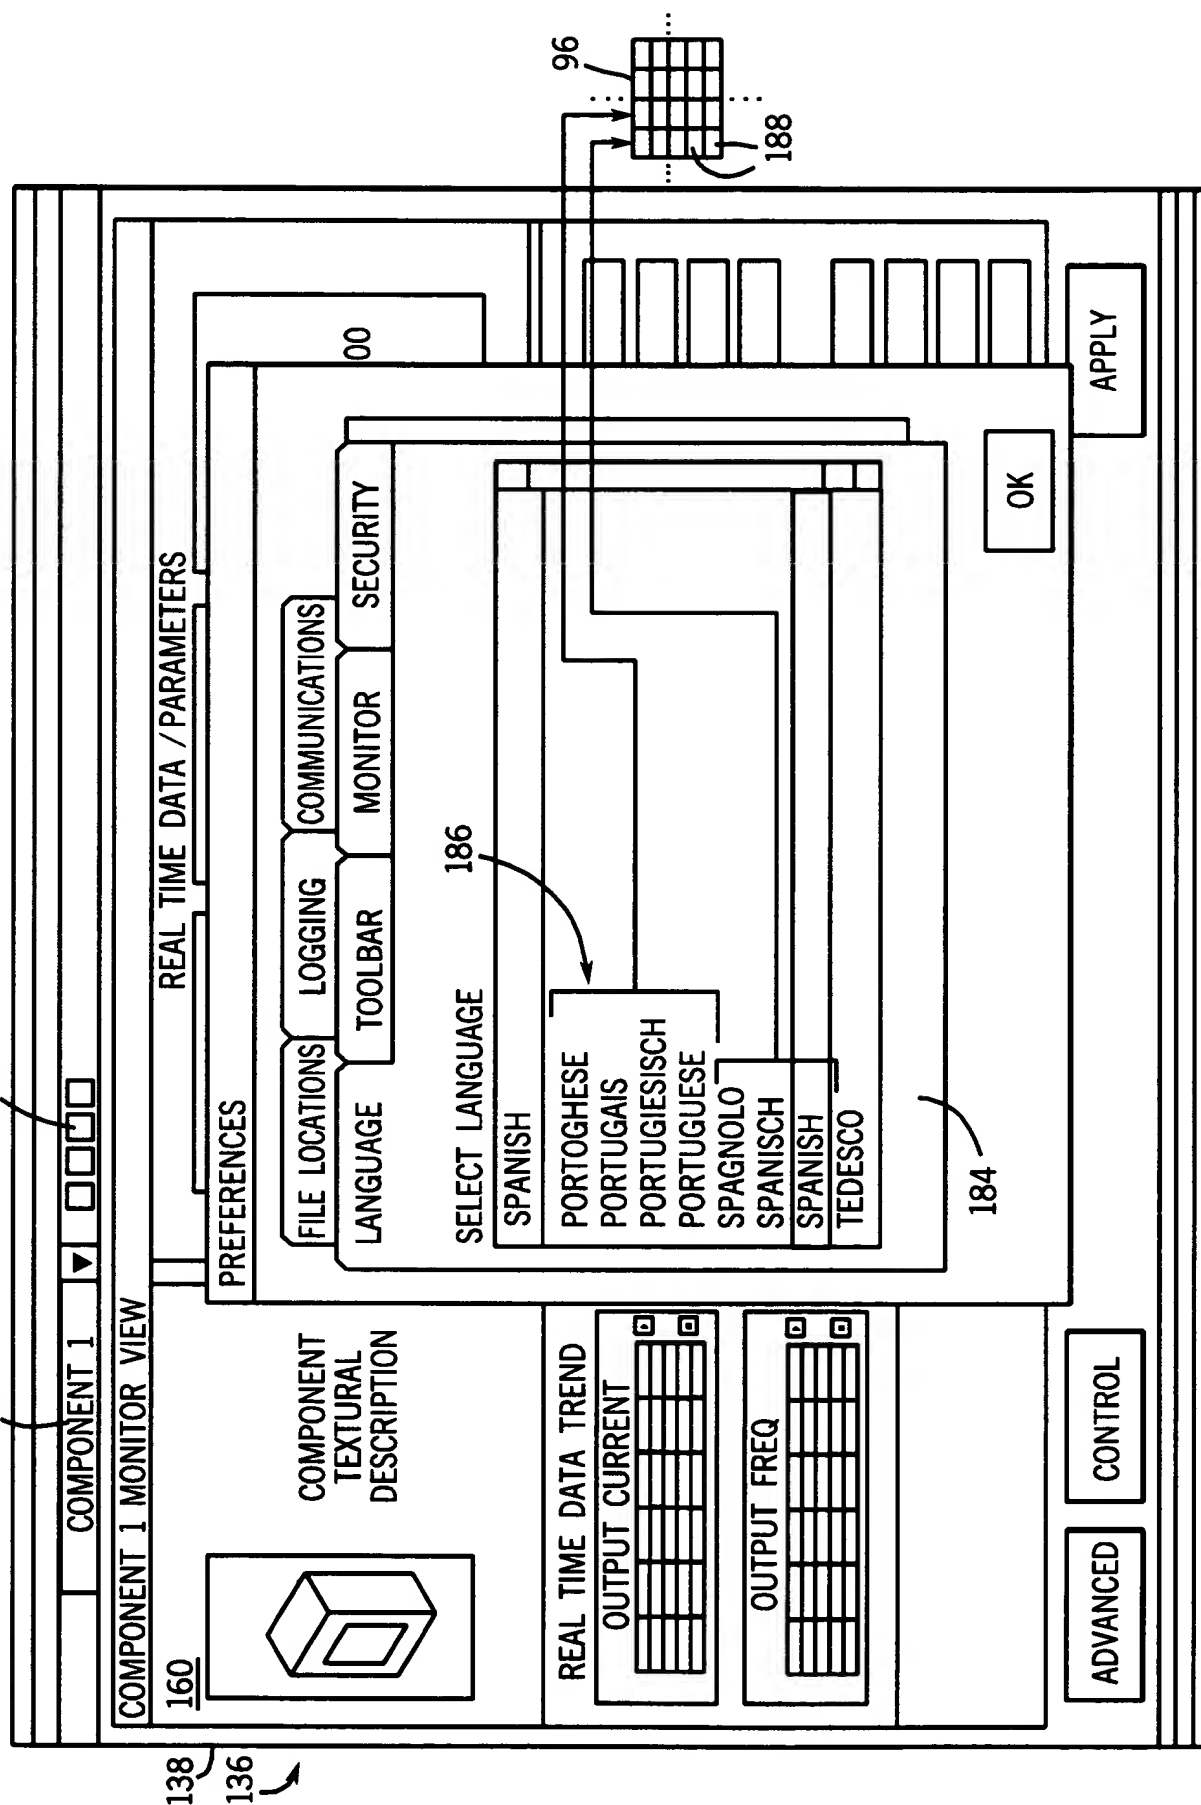


FIG. 11

SYSTEM 1

▼

□□□□

SYSTEM 1 SPREADSHEET VIEW

SELECT SORT

NONE

▼

☐ ASCENDING
 ☐ DESCENDING
 ☒ NONE

SELECT FILTER

NONE

▼

DNETDEVICE	NODE	VERT SECTION	UNIT LOC	SPACE FACTORS	UNIT TYPE	IN...	WIDTH	RATING	CATALOG NUMBER
DSA	07	2	E	1	FVNR		20	10HP	XXXXX
DSA	06	2	G	1.5	FVR		20	2HP	XXXXXXXXXX
DSA	05	2	K	1	FVNR		20	15HP	XXXXXXXXXX
NONE		2	M	0.5	DOOR		20		
1336IMPACT	27	3	A	1	ACD		20	400A	
NONE		3	F	1	DOOR		20		
DSA	09	3	H	2	FVNR				
DSA		4	A	1	FVNR				
.				
.				
.				

SHOW /HIDE COLUMNS...

EDIT I/O...

SHOW /& HIDE COLUMNS

COLUMN NAME	
DNET DEVICE	<input checked="" type="checkbox"/>
STATE	<input type="checkbox"/>
NODE	<input checked="" type="checkbox"/>
SERIAL NUMBER	<input type="checkbox"/>
VERT SECTION	<input checked="" type="checkbox"/>
UNIT LOC	<input checked="" type="checkbox"/>
SPACE FACTORS	<input checked="" type="checkbox"/>
DUAL UNIT	<input type="checkbox"/>
LEFT / RIGHT	<input type="checkbox"/>

OK

CANCEL

FIG. 12

EVENT LOG

SYSTEM 1

DOCUMENTATION

DRAWINGS

REPORTS

MANUALS

SPARE PARTS

SELECT SORT

☐ ASCENDING
 ☐ DESCENDING
 ☒ NONE

DEVICE SERIAL...	DATE	SECTION	LOCATION	DESCRIPTION	DEVICE TYPE	USER 1	USER 2	USER 3
1074397223	06 / 16 / 2000 14:12:54	3	A	SERIAL NO. CHANGE ON DEVICENET...	1336PLUSII			
1074397223	06 / 22 / 2000 11:03:26	3	A	SERIAL NO. CHANGE ON DEVICENET...	1336PLUSII			
1074397223	06 / 23 / 2000 15:32:47	3	A	NO COMMUNICATION	1336PLUSII			
1074397223	.	3	A	NO COMMUNICATION	1336PLUSII			
1074397223	.	3	A	NO COMMUNICATION	.			
1074397223	.	3	A	FAULT	.			
.			
.			
.			

FIG. 13

140

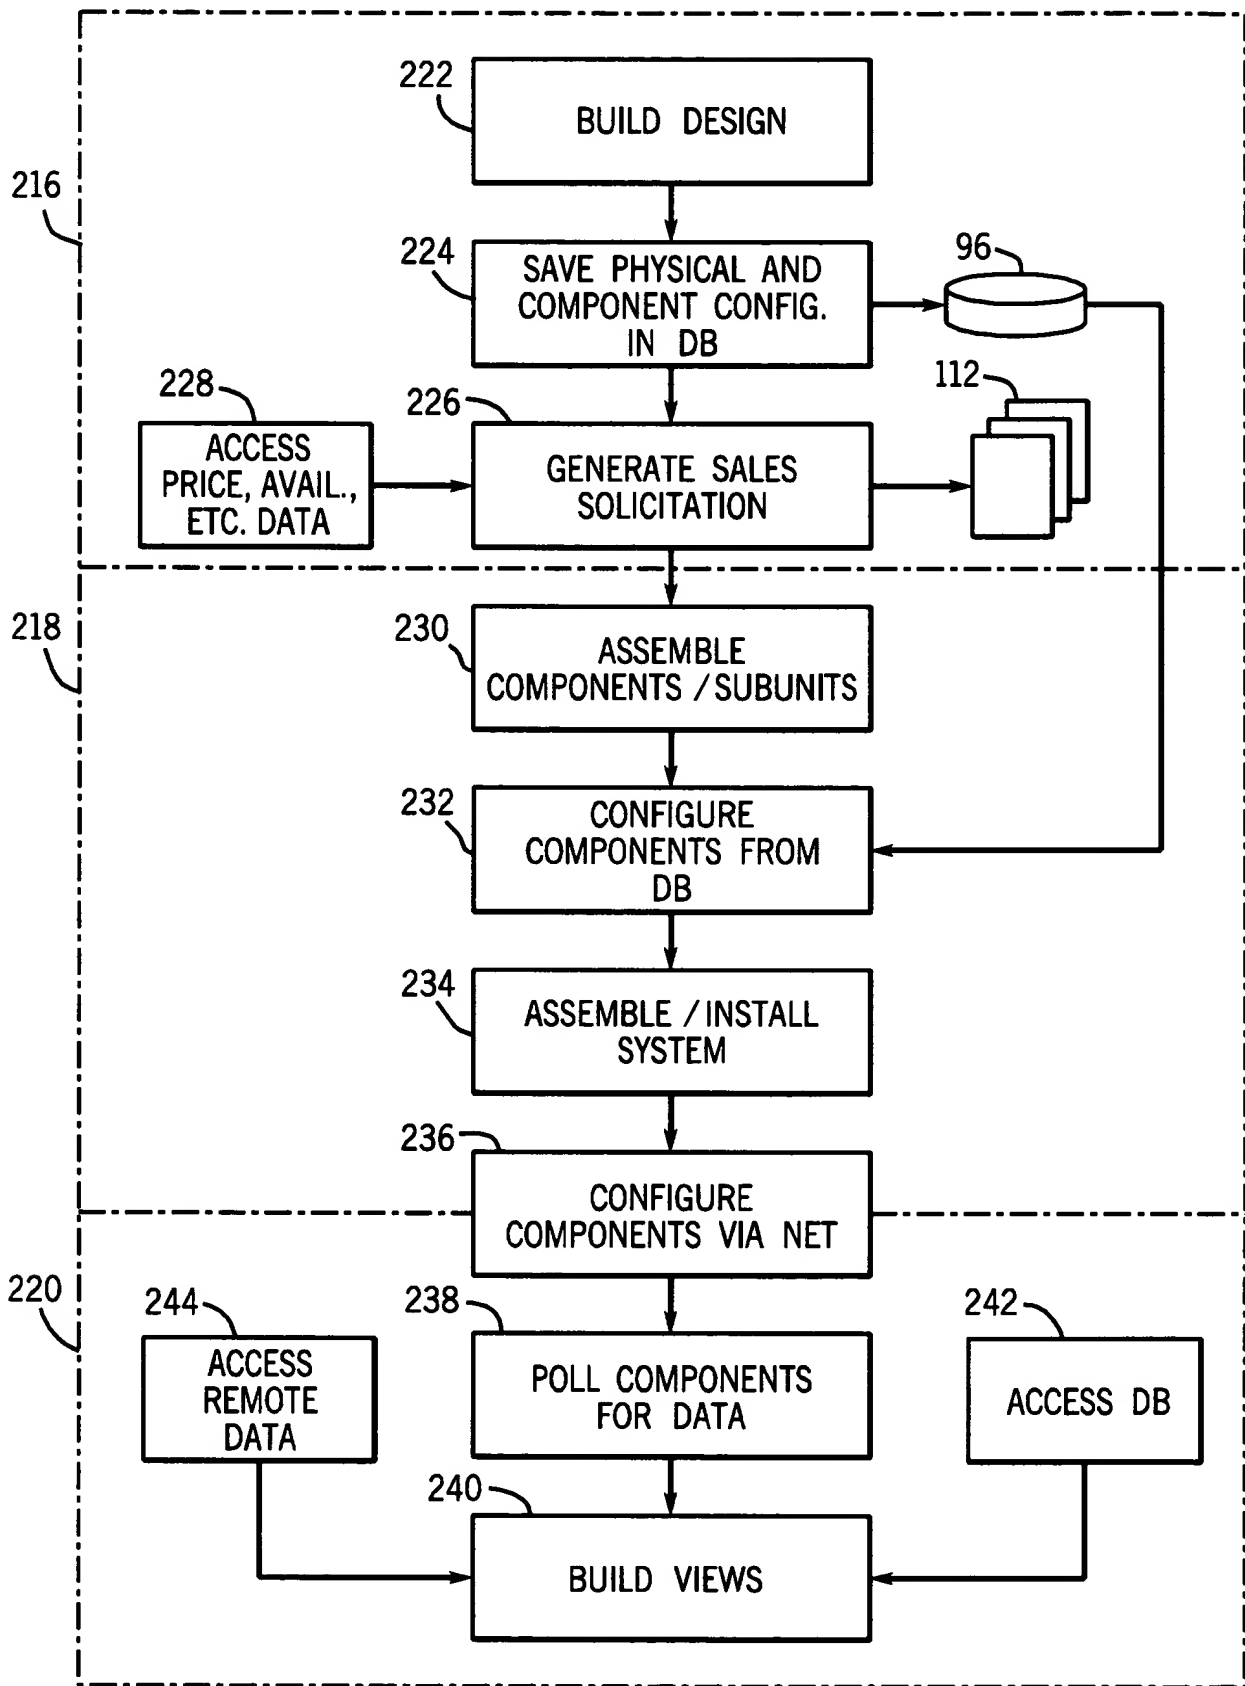


FIG. 14